

# Operating Manual Black&White|4



# Table of contents

1	Publishi	ng Details	4
2	About t	his document	5
	2.1	Purpose	5
	2.2	Navigation	5
	2.3	Terms used	5
	2.4	Symbols and emphasized text	6
3	Introduc	rtion	7
	3.1	Intended use	7
	3.2	Target audience	7
	3.3	Limitation of liability	7
	3.4	Warranty conditions	7
4	Safety		8
	4.1	General safety instructions	8
	4.2	Safety warnings	10
	4.3	General safety instructions for this coffee machine	11
5	Overvie	W	14
	5.1	Scope of delivery	14
	5.2	Coffee machine	14
	5.3	Machine Dimensions CE	16
	5.4	Machine Dimensions UL	16
	5.5	Capacity information	17
	5.6	Type plate	17
	5.7	Connections (view from underneath)	18
	5.8	Outlet Options	19
6	Commis	ssioning	20
	6.1	Switching on Coffee Machine	20
	6.2	Filling the bean hopper	20
7	Operation	on	22
	7.1	Overview of user interface	22
	7.2	Functional description	22
	7.3	Lighting concept	23
	7.4	Dispensing Steam	24
	7.5	To dispense a coffee or tea product in barista/manager mode	29
8	Settings	in the user menu	31
	8.1	Overview – user menu	31
	8.2	Calling up the user menu	32
	8.3	User login	32

	8.5	Menu tab and access rights	34
	8.6	General settings	36
	8.7	Product settings	43
	8.8	Statistics	50
	8.9	System	51
	8.10	Events	52
9	Cleaning	g	54
	9.1	Cleaning agents and accessories	54
	9.2	Cleaning schedule	55
	9.3	Cleaning product outlet	55
	9.4	Cleaning the steam wand	56
	9.5	Clean bean container	57
	9.6	Cleaning prompt	58
	9.7	Execute automatic cleaning	58
	9.8	Cleaning key	59
	9.9	Clean the grounds container and drip tray	60
	9.10	Clean exterior components	61
10	Troubles	shooting	62
	10.1	Overview	62
	10.2	Possible indications and errors and their rectification	62
11	Accesso	ories and consumables	64
	11.1	Cleaning agents	64
	11.2	Accessories	64
12	EU Decla	laration of Conformity	65
13	UK Decl	laration of Conformity	66
14	FCC/IC I	Declarations of Conformity	67

# 1 Publishing Details

Original Operating Manual

OM - CTS - 144.972 - D - en

Model Range: BW4

#### Manufacturer

Thermoplan AG Thermoplan-Platz 1 CH-6353 Weggis

Tel. +41 (41) 392 12 00

thermoplan@thermoplan.ch www.thermoplan.ch

# 2 About this document

# 2.1 Purpose

This operating manual supports the user in his daily work; it is an integral component of the coffee machine.

- ▶ Carefully read the operating manual all the way through before using the coffee machine.
- ▶ Take good care of the operating manual and keep it on hand in the vicinity of the coffee machine.
- ► The user must have read and understood the work steps and instructions, particularly the points concerning safety and hygiene.

# 2.2 Navigation

This document contains the following navigation aids in order to find specific information quickly:

- Table of contents
- Cross-references within the texts
- Symbols and emphasized text

#### 2.3 Terms used

The following terms are used in this operating manual:

Term	Explanation
Coffee machine	Coffee machine with or without options
Product	Beverage produced with the coffee machine
Users	Persons who operate the coffee machine (obtain products) and additionally carry out adjustments and light maintenance work (cleaning, filling beans) (e.g. barista, manager).
Operators	Persons who operate the coffee machine in self-service mode (procure products)
Touchscreen	Operating screen with display in order to use the machine
Display	Display on the touchscreen
Symbol	Digital button on the touchscreen
Swipe	To move the finger on the touchscreen to the left/right
Scrolling	To move with the finger on the touchscreen upward/downwards
Barista	Programmer and user level for the user (adjustment possibilities)
Manager	Programmer and user level for the manager (extended adjustment possibilities)

© Thermoplan AG 5 / 68

# 2.4 Symbols and emphasized text

Symbol	Name	Function
<b>&gt;</b>	Action	When the user must execute a work step, this is marked with an action. For example:
		Activate main switch.
▶	Reaction	This emphasis is used to indicate a reaction to a prior action. For example:
		Activate main switch.
		⇒ Coffee machine starts.
[Type plate ▶ 17]	Cross-reference	This emphasis is used to refer to a page within this document. Cross-references are linked and can be executed with a mouse click.
>	Menu navigation	This emphasis is used to present the navigation in the "Benutzermenu" (user menu).  Ex: Product Settings > Edit View
Italic	Tap symbol	Indicates a symbol/menu that should be tapped. Example: Press the <i>Confirm</i> icon.

# 3 Introduction

#### 3.1 Intended use

The coffee machine is only suitable for producing coffee, hot water and steam products.

Coffee machine is suitable for commercial use in catering sector, canteens, offices, etc.

## 3.2 Target audience

This document is intended for the users of the coffee machine.

## 3.3 Limitation of liability

The manufacturer accepts no liability whatsoever for any injuries or accidents due to failure to comply with the safety instructions contained in this operating manual. In addition, any liability applies exclusively within the coffee machine limits, see [scope of delivery > 14]. The manufacturer is liable for problems in accordance with the [warranty conditions > 7]. The manufacturer accepts no liability for damage as the result of negligent or improper use of the machine.

## 3.4 Warranty conditions

The manufacturer warranty is valid for 12 months after the installation or 15 months after delivery ex-works for individual parts or components in the event of manufacturing or design faults. For malfunctions resulting from negligent use or incorrect connections there will be no replacement. Wear parts are not included in the quarantee performance. The work time for guarantee tasks is not covered by the manufacturer guarantee.

#### NOTICE

#### Cancellation of the guarantee claim



Guarantee claim is void if the prescribed maintenance cycles are not complied with, or if there is any resulting damage.

- Comply with the prescribed maintenance cycles.
- Only have qualified technicians perform maintenance.

© Thermoplan AG 7 / 68

# 4 Safety

# 4.1 General safety instructions

#### 4.1.1 Use of the coffee machine

- Only use the coffee machine if it is functioning faultlessly and there are no indications of damage. If there is a fault or damage notify your service partner immediately.
- If there is a fault or an emergency switch off the coffee machine via the main switch. Then unplug the mains plug or interrupt the power supply. Interrupt the water supply.
- Opening the housing is prohibited.
- Penetration into the coffee machine with an object or body part is prohibited.
- Modifying or manipulating the coffee machine is prohibited.

#### 4.1.2 Prerequisites for use of the coffee machine

#### Service partner

The service partner is Thermoplan AG's local representative. If there are any queries or problems please contact your service partner. The service partner will, depending on the situation, dispatch qualified technicians.

#### **Oualified technicians**

Qualified technicians are trained and certified specialist that market and maintain Thermoplan products. They have knowledge of the coffee machine and practical experience with it, especially with regard to safety and hygiene.

#### Users

Users are persons who have been instructed and trained in the use of the coffee machine (reading the operating instructions). They can operate the coffee machine and perform the maintenance steps according to the operating instructions.

#### Children

This coffee machine can be used by children from 8 years of age as well as by persons with reduced physical, sensory or mental capacities or who lack experience and knowledge if they are supervised or if they have been instructed in the safe use of the coffee machine and the risks associated with the coffee machine. Children are not allowed to play with the coffee machine. Cleaning and maintenance must not be performed by children without supervision.

#### 4.1.3 Installation and commissioning

The coffee machine may only be set up, installed or repositioned by qualified technicians.

#### 4.1.4 Maintenance

Perform all necessary cleaning tasks on a regular basis and in accordance with the description in this manual.

The coffee machine must be maintained by a qualified technician at least once a year. An appropriate message appears on the touchscreen.



## 4.1.5 Dismantling and disposal


The coffee machine must only be dismantled by qualified technicians. The same applies to the disposal of the coffee machine and its packaging.

© Thermoplan AG 9 / 68

# 4.2 Safety warnings

#### 4.2.1 Structure

Sample safety notice

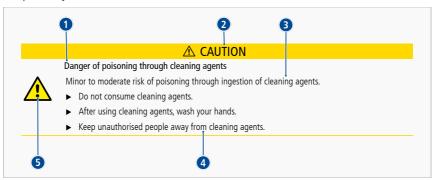

- 1 Source of danger
- 3 Hazards
- 5 Safety sign

- 2 Signal word
- 4 Risk prevention

#### 4.2.2 Conventions

Hazards for personnel

# **⚠** DANGER



#### Danger

The safety notice with the signal word "Danger" indicates a dangerous situation which, if it is not avoided, will result in death or serious injury.

# **MARNING**



Possible, imminent danger

Indicates a possible threatening danger that can result in severe bodily injury or death.

# **A** CAUTION



Possible danger

Indicates a possible threatening danger that can result in minor bodily injury.

#### Material damage

# **NOTICE**



#### Product damage

Indicates a situation, which if the instructions are not complied with, can damage the coffee machine or its function.

## 4.3 General safety instructions for this coffee machine

#### 4.3.1 Personal injury – WARNING:

# **⚠** WARNING

#### Electric shock

Contact with electrical components during operation of the coffee machine can result in death or serious injury.

- ► The machine may only be connected to networks that comply with the applicable national or local installation laws (e.g. ground fault circuit interrupter with household installation).
- Do not open the housing under any circumstances.



- Never immerse coffee machine, cable, or plug in water or or other liquids.
- ▶ Immediately stop using the coffee machine if cable or plug are damaged.
- ► Keep the coffee machine or cable away from hot machine parts. Use of the coffee machine in the vicinity of open flame is strictly prohibited.
- Protect the cable from sharp edges.

Keep the coffee machine dry.

- ▶ When removing the grounds container do not reach into the interior of the housing.
- Only have the coffee machine installed, relocated, removed, repaired or maintained by qualified technicians.
- Keep the coffee machine and the connecting cable out of the reach of children.

© Thermoplan AG 11 / 68

# **↑** WARNING

#### Danger of food poisoning

Consuming contaminated food can result in death or serious injury.

- Only use food products with a use-by date that has not yet expired.
- Use drinking water only.
- ▶ Store food products at suitable locations.
- Regularly clean the coffee machine as specified in the operating manual.
- Only use high-quality coffee beans.



- Keep the bean hopper closed.
- Do not fill the bean hopper before longer operating interruptions (night, holiday, etc.).
- ▶ Keep the coffee supply in airtight containers where it is protected against light.
- Store the coffee supply in a cool and dry location. Coffee can be stored for months without loss of quality by deep-freezing.
- ▶ If the coffee machine is idle for longer than 15 minutes without producing a product, a manually activated rinse must be carried out before the next product is dispensed.
- If the coffee machine has been idle for more than 15 minutes without producing a steam product, a manual purge (hold down for 10 seconds) of the steam lance must be carried out before the next product is dispensed.

# **⚠** WARNING



## Danger of injury due to grinders

Danger of medium-severe or severe injuries when touching the grinders.

- Only instructed personnel are allowed to remove the bean hoppers.
- Never reach into the grinders.

#### 4.3.2 Personal injury – CAUTION:

# **CAUTION**

# Danger of scalding



Risk of minor or moderate scalding from contact with hot liquids and steam.

- Keep your hands away from the product outlets.
- Avoid direct body contact with hot liquids and steam.
- Do not touch the product spouts before and after dispensing drinks/steam or during cleaning.
- Carefully emptied the drip tray, ensure that contact with hot liquids is not possible.

## 4.3.3 Material damage

# **NOTICE**

#### Damage to the coffee machine

Incorrect use of the coffee machine or the wrong, defective spare parts can result in material damage.

- Check whether the coffee machine to be installed complies with applicable federal, national, or municipal plumbing codes.
- ► The coffee machine is designed for indoor use only.
- Clean the coffee machine before longer periods of non-use. Remove and empty the grounds container, and disconnect the coffee machine from mains supply.




- Only operate the coffee machine at an ambient temperature of 16 °C to 32 °C.
- ▶ Set up the coffee machine on a flat, horizontal, stable and water and heat-resistant surface.
- ▶ Do not position the coffee machine where a water jet could be used for cleaning.
- Leave at least 50 mm of free space in front of the ventilation openings.
- Always store the coffee machine at a temperature above 0 °C in a dust-free and dry environment.
- ▶ The upper edge of the coffee machine must be at least 1.5 m above the floor.
- Only use genuine Thermoplan cleaning accessories.
- Never operate the coffee machine without the drip grid.
- ▶ Do not store explosive substances such as aerosol cans with a flammable propellant in the interior of the coffee machine.

© Thermoplan AG 13 / 68


#### 5 Overview

#### Scope of delivery 5.1

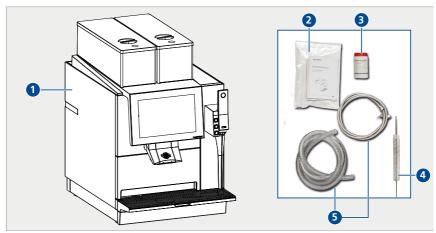


- Coffee machine
- Coffee cleaning tablets (red)
- Water supply and drain hoses 5
- 2 Operating manual
- Cleaning brush

#### Coffee machine 5.2

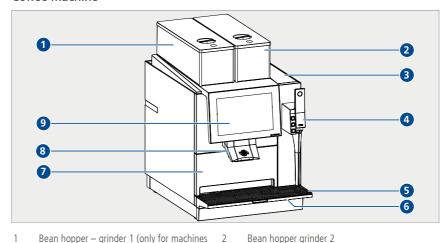

- Bean hopper grinder 1 (only for machines with two grinders)
- Steam module 3
- 5 Cup rack
- Grounds container 7
- Touchscreen with display

- Bean hopper grinder 2
- 4 Steam control unit
- 6 Drip tray
- Product outlet 8

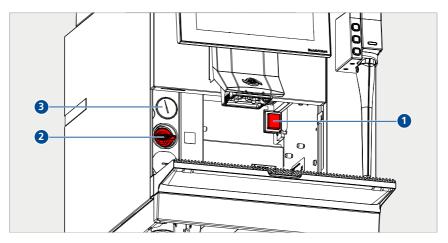


1 Main switch


- 2 Coffee cleaning key
- 3 Pressure gauge (coffee boiler)

© Thermoplan AG 15 / 68

# 5.3 Machine Dimensions CE

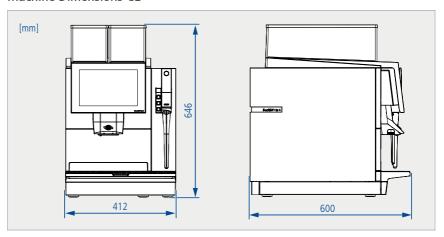

# 5.4 Machine Dimensions UL

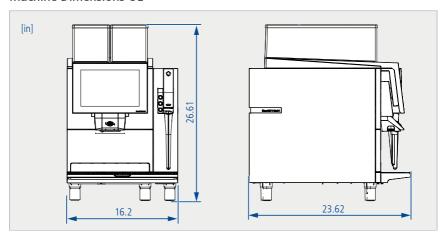


# 5.5 Capacity information

Capacities of products (per hour)	240 x espresso / 200 x coffee / 120 x tea / 60 x steam products (quantity depends on cup size and machine settings)		
Bean hopper capacity	$2 \times 1.7 \text{ kg}$ (3.75 lbs) (quantity depends on the coffee bean and must be checked individually)		
Electrical connection/power	Machine with one phase 220-240 VAC / 50-60 Hz 5800-7100 W / 32 A		
	Machine with three phases 380-415 VAC / 50-60 Hz 5800-7100 W / 3 x16 A		
	Machine for US/CA: 208 VAC / 60 Hz 5700 W / 27 A		
	208 VAC / 60 Hz 5000 W / 24 A		
	Machine for Japan: 200 VAC / 50-60 Hz 5200-5300 W / 26 A		
Dynamic water pressure	0.2-0.4 MPa (2-4 bar) / 30-60 psi (required operating pressure)		
Max. water inlet pressure	1 MPa (10 bar) / 145 psi (if the pressure exceeds 4 bar, a pressure reducer must be used)		
Water boiler pressure	11.7 bar / 169.6 psi		
Steam boiler pressure	2.7 bar / 39.16 psi		
Dimensions (W/D/H)	CTS CE: 412 x 600 x 646 mm CTS UL: 16.2 x 23.62 x 26.61 in		
Weight	67 kg / 147.71 lbs		
Noise emission	<70 dB		


# 5.6 Type plate

- ► Make sure that the outlet is at the highest position.
- ► Remove the grounds container.
  - ⇒ The type plate is on the right side in the interior.

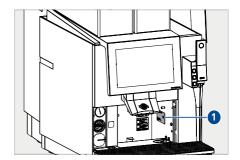

© Thermoplan AG 17 / 68

# 5.7 Connections (view from underneath)

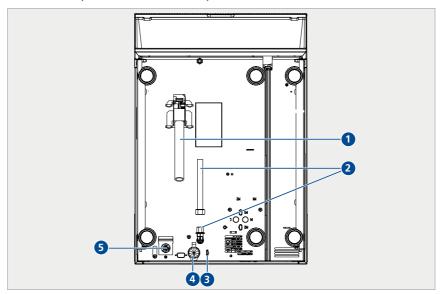


- 1 Drain system of coffee machine
- Waste water tank sensor
- 5 Coffee machine mains cable
- Water connection coffee machine
- LAN connection

# 5.8 Outlet Options

The coffee machine can be obtained with two different outlet options.

#### 5.8.1 Standard outlet

- Standard option with all coffee machines.
- Height manually adjustable

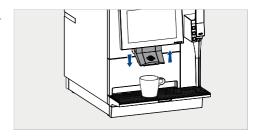

#### 5.8.2 Automatic outlet

- Can be ordered as an option.
- Automatically adjusts to the preprogrammed cup sizes.
- Can also be moved manually if required.




© Thermoplan AG 19 / 68


# 6 Commissioning

# 6.1 Switching on Coffee Machine

Make sure that the outlet is at the highest position.

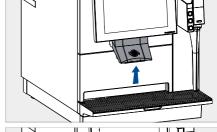

► Remove the grounds container.

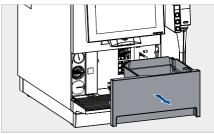

- Activate main switch.
- ► Follow the instructions on the display.



# 6.2 Filling the bean hopper

# **MARNING**




Danger of injury due to grinders

Danger of medium-severe or severe injuries when touching the grinders.

- Only instructed personnel are allowed to remove the bean hoppers.
- Never reach into the grinders.


- ► Remove the lid of the bean hopper.
- ► Fill the bean hopper with fresh coffee beans.
- ► Fit the lid back on the bean hopper.
  - ⇒ Coffee products are now ready to be dispensed [Dipense the product in barista/ manager mode ▶ 29].

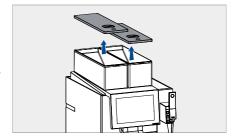

© Thermoplan AG 21 / 68

# 7 Operation

# 7.1 Overview of user interface

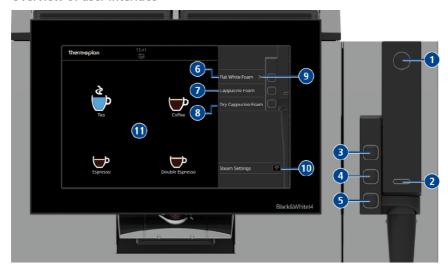

- 1 Purge function
- 3 Black&White AirSteam® button top
- 5 Black&White AirSteam® button bottom
- 7 Product name Black&White AirSteam® button centre
- 9 Product list icon
- 11 Coffee and tea products

- 2 AutoSteam function
- 4 Black&White AirSteam® button centre
- 6 Product name Black&White AirSteam ® button top
- 8 Product name Black&White AirSteam® button bottom
- 10 AutoSteam settings

# 7.2 Functional description

No.	Function	Description	Area
1	Purge function	The purge function is used for cleaning purposes. The cleaning lever must be operated before and after each product to clean the steam pipe. No purge can affect the milk quality.  The purge lever can also be used to stop a steam product.	Temperature: max. 95 °C Time: max. 60 s
2	AutoSteam function	AutoSteam is perfect for professional baristas who want to heat their milk manually by frothing it individually.  The Black & White 4 interrupts the heating process when the desired temperature is reached.	Temperature: 55-95°C Steam output: 1-10

No.	Function	Description	Area
		Depending on the jug size or barista skills, the steam output can be adjusted before the product for more control over the manual steam process.	
		The AutoSteam lever can also be used to heat the tea water to the desired temperature.	
3 4 5	Black&White AirSteam <sup>®</sup> buttons	Black&White AirSteam®is a fully automatic steam function. Three configurable buttons give the user quick access to a variety of recipes. The machine foams any type of milk without user interaction.	Temperature: 55-72 °C Air volume: 1-6 Optimum amount of milk: 200-450 ml
		The machine doses the steam power accordingly for the perfect milk froth. There is no need to configure quantity-based recipes.	
6 7 8	Product name Black&White AirSteam® buttons	The recipes programmed on the individual buttons are displayed in this area. The individual keys can be programmed in the <i>Global Product Settings</i> menu.	-
9	Product list icon	If several milk types and temperatures are used, it is recommended to use the list/group function. This allows the barista to select the product via the touch screen and pre-set the button with the desired product. Each button can be configured as a list in the <i>Global Product Settings</i> menu.	
10	AutoSteam settings	This quick access button can be used to define the steam output and temperature. These settings can be made before each product is dispensed. This does not require user login. The last change is saved. Access to this setting can be restricted under <i>Global product settings</i> .	
11	Temperature progress bar	The current product temperature and the target temperature are displayed after product selection. A progress bar indicates the heating process of the current product.	
12	Coffee and tea products	This view shows all configurable product recipes for tea and coffee. The view can be set individually under <i>Edit views &gt; Dimensions</i> (see [Creating and Editing Views • 44]).	-

# 7.3 Lighting concept

Status	Meaning
Purge blinking	Purge steam wand with steam blast.
AutoSteam lights up	AutoSteam product is being dispensed.
Black&White AirSteam® lights up	Product Black&White AirSteam® is obtained.
All buttons blinking	Machine is in the heating process or has an error.

© Thermoplan AG 23 / 68

Status	Meaning
All buttons are dimly lit	Machine ready for product selection.

# 7.4 Dispensing Steam

#### 7.4.1 Obtaining Black&White AirSteam® product in barista/manager mode

# **A CAUTION**

# Danger of scalding



Risk of minor or moderate scalding from contact with hot liquids and steam.


- Keep your hands away from the product outlets.
- Avoid direct body contact with hot liquids and steam.
- Do not touch the product spouts before and after dispensing drinks/steam or during cleaning.
- ► Carefully emptied the drip tray, ensure that contact with hot liquids is not possible.
- ► Clean the steam wand with a damp, nonabrasive cloth.
- ▶ Press the purge lever for 2-3 seconds to blow out the steam wand.

**Caution:** Not steaming out before each product will have a negative effect on the milk foam quality.


- Select milk jug (optionally available) according to the beverage to be prepared.
- ► Fill milk jug with desired type of milk to just below the base of the spout.

**Note:** All plant-based products must be shaken before use.

All milk types must be chilled between 1-5 °C for best foam quality results.

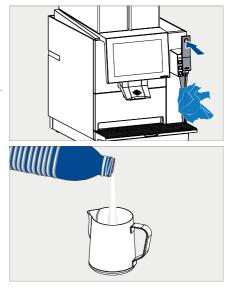

- ▶ Place a cup under the coffee outlet.
- ▶ Place the jug under the steam spout.
  - ⇒ Align the steam nozzle slightly off-centre for better foaming of the milk.

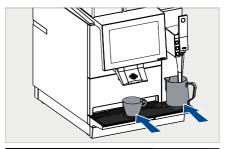

► Select coffee product (1).




► Select Black&White AirSteam® product (2).



► Products are prepared (temperature progress bar is displayed) (3).




► Remove the finished products and combine them to make the desired beverage.

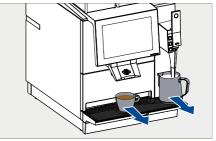

© Thermoplan AG 25 / 68

- After product is dispensed, clean the steam wand with a damp, non-abrasive cloth.
- Press the purge lever to blow out the steam wand.

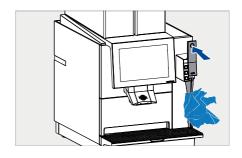

#### 7.4.2 To dispense AutoSteam product in barista/manager mode

# **⚠ CAUTION**

# Danger of scalding



Risk of minor or moderate scalding from contact with hot liquids and steam.


- ► Keep your hands away from the product outlets.
- Avoid direct body contact with hot liquids and steam.
- Do not touch the product spouts before and after dispensing drinks/steam or during cleaning.
- Carefully emptied the drip tray, ensure that contact with hot liquids is not possible.
- Clean the steam wand with a damp, nonabrasive cloth.
- ▶ Press the purge lever for 2-3 seconds to blow out the steam wand.

**Caution:** Not steaming out before each product will have a negative effect on the milk foam quality.

- Select milk jug (optionally available) according to the beverage to be prepared.
- ► Fill milk jug with desired type of milk to just below the base of the spout.

**Note:** All plant-based products must be shaken before use.

All milk types must be chilled between 1-5 °C for best foam quality results.

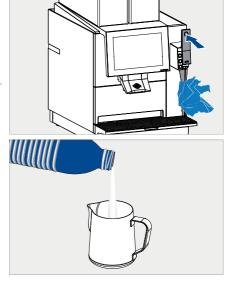


► Select Steam settings (1).



- ► Select target temperature (55-95 °C) (2).
- ► Select steam output (3).

**Note:** 1 for very small amounts of milk and 10 for very large amounts of milk.

- ► Confirm settings (4).
- ► Immerse the steam pipe in the milk jug.
  - ⇒ Place the tip of the steam pipe directly under the surface of the milk.

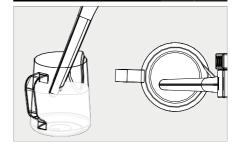


- ► Press the AutoSteam button (5) and start the steam process.
- Swish and roll the milk until the desired consistency is reached.



© Thermoplan AG 27 / 68

- After product is dispensed, clean the steam wand with a damp, non-abrasive cloth.
- ▶ Press the purge lever to blow out the steam wand.

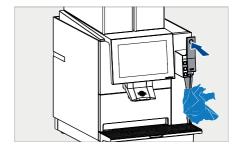

# 7.5 To dispense a coffee or tea product in barista/manager mode


# **A CAUTION**



# Danger of scalding

Danger of minor or medium severity scalding injuries through contact with hot liquids.

- Avoid direct physical contact with hot liquids.
- ► Place the cup on the round mark under the outlet.
- ► In the case of manual outlet: Slide outlet upward or downward depending on cup size.
- ► Scroll or swipe left (1) or right (2) to see more products.
- ► Select product (3).
  - ⇒ Selected product will be dispensed (4).

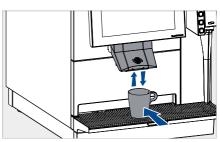






© Thermoplan AG 29 / 68

- ► Take the cup out of the cup grid.
  - ⇒ Product is ready for consumption.

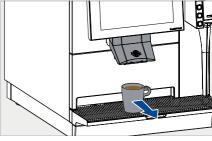

► Tap on the *Cancel* symbol (5) to abandon the dispensing of the product.



## Dispensing product from product group

Product groups are grey-shaded product (folders), in which a majority of products was summarised into a random category.

► Select product group (1).




- ► Select the desired product from the product group (2).
  - ⇒ The product is dispensed.



# 8 Settings in the user menu

The user of the coffee machine can make various settings in the user menu. There are three different user groups for controlling access authorization. The user groups are protected with a number code via the login window. The number codes are transferred at installation and instruction by the service partners qualified technician.

#### 8.1 Overview – user menu

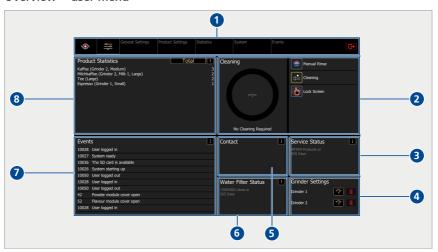

- 1 Menu tab
- 3 Status Service:
  - Products or days until the next water service
- 5 Contact:
  - Contact data of service partner
- 7 Events:
  - Latest events and error messages

- 2 Cleaning:
  - Cleaning status
  - Rinse button
  - Cleaning button
  - Touchscreen lock
- Grinder Settings:
  - Set grinding I degree for grinder 1 or 2 (active only if ISQ is switched off)
- 6 Water filter status:
  - Water quantity or days until next water filter change
- 8 Product statistics:
  - Current product statistics (server, manager or total)

© Thermoplan AG 31 / 68

# 8.2 Calling up the user menu



► Tap on the *User menu* symbol(1).

► The start screen (dashboard) of the user menu is displayed.





# 8.3 User login

## Variant 1: barista/manager active



- ▶ Press and hold the *User menu* (1) symbol.
- ► Enter the barista/manager code in the login window and confirm.

**Note:** If an individual PIN was saved, the user group must additionally be selected in the login window.

► The start screen (dashboard) of the user menu is displayed.





# 8.4 User logout



- ► Tap the *logout* symbol to logout the active user.
  - $\; \Rightarrow \;$  After logout the user group set as standard user is automatically active.

© Thermoplan AG 33 / 68

# 8.5 Menu tab and access rights

Pos.	Activity	Barista	Manager	Comments	
		🚣 Barista	A Manager		
	Dispensing product	<b>✓</b>	<b>~</b>	Dispensing the product	
	Cleaning/rinsing	<b>✓</b>	<b>✓</b>	Execute automatic cleaning	
1	Return to the product screen	<b>~</b>	<b>~</b>		
2	Call up user menu (dashboard)	<b>~</b>	<b>~</b>	User login	
3	General settings			[General settings ▶ 36]	
	Regional settings	X	<b>~</b>		
	• Screen settings	X	<b>~</b>		
	Customer Languages	X	<b>~</b>		
	Service information	<b>~</b>	<b>~</b>		
		Read only	Read only		
	Order Customization	X	<b>✓</b>		
	User settings	X	<b>✓</b>		
4	Product settings			[Product settings ▶ 43]	
	Global Product Settings	X	<b>✓</b>		
	Cups Settings	X	<b>✓</b>		
	ISQ Settings	X	X		
	Product list	X	<b>~</b>		
	Payment List	X	<b>✓</b>		
	• Edit products	X	<b>✓</b>		
	• Edit views	X	<b>~</b>		
5	Statistics			Statistics	
	Product ranking list	Read only	<b>~</b>		
	Machine counters	Read only	<b>~</b>		
6	System	,		System	
	• Information	<b>✓</b>	<b>✓</b>		
	Data Backup and Recovery	×	<b>~</b>		

Pos.	Activity	Barista	Manager	Comments
		🚣 Barista	A Manager	
	Machine configuration	×	<b>~</b>	
	Machine Outfit	X	<b>~</b>	
	Machine test	X	X	
	• Network	<b>~</b>	<b>✓</b>	
	• Licenses	<b>~</b>	<b>~</b>	
7	Events			[Events ▶ 52]
	Event Log	<b>~</b>	<b>~</b>	
	• Recording	X Read only	<b>✓</b>	

© Thermoplan AG 35 / 68

# 8.6 General settings



Changes in this menu can only be made by the manager user group.

#### 8.6.1 Regional settings

- ► Select *General Settings > Regional Settings* (1).
- ► Make regional settings (2).
- Settings are saved automatically.




## 8.6.2 Screen settings

#### Installing screen saver

#### **USB Flash Drive Requirements**

- ▶ Purchase branded goods.
  - ⇒ Dimensions: Max. 10 mm x 26 mm, length min. 40 mm.
  - ⇒ Storage space: Max. 32 GB.
- ► Format FAT32 (before use).

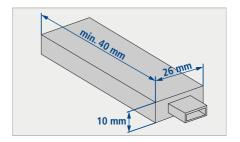

#### Photographic material requirements

- Size: 800 x 1280 pixels, 50 px reserved for info bars.
- Format images: .jpg
- Format videos: .webm and .ogg
- < 5 MB



## Installing screen saver

- remove the USB cover (1).
- ► Insert empty USB stick.

- ► Select System > Backup and Restore (2). ► Select Style files (3). ► Tap on the *Data backup* (4) symbol.
  - (3)

- - ⇒ Screen saver graphics are backed up.
- Remove the USB flash drive
- ► Open the directory ...\NovigoBackup/Backup/ StyleFiles/ ScreenSaver on the USB stick....
- ▶ Replace or supplement the graphics in the directory with your own graphics.
  - ⇒ Attention: The ScreenSaver folder must not be greater than 5 MB, otherwise uploading to the machine is not possible.
- ▶ Insert the USB flash drive into the coffee machine again.
- ► Select *System > Recovery* (5).
- ► Tap the *Update available items* symbol (6).
- ▶ Select Style files (7).
- ► Tap on the *Restore* symbol (8).
  - ⇒ The screen saver is installed.



© Thermoplan AG 37 / 68

#### Configuring Screen Saver

- ► Select General Settings > Screen Settings (1).
- ► Set Content Management to Local (2).
- ► Switch on the screen saver with the slider (3).
- Tour bars in the continue of t
- ► Under *waiting time* (4) specify the time (min) after which the screen saver is activated.
- ► Select*Preview* (5) to test the screen saver.



## Adjusting screen brightness

- ► Select *General Settings* > *Screen Settings* (1).
- Adjust the screen brightness with the slider: To the left (2) = darker, to the right (3) = brighter.



## Display settings

38 / 68

The appearance of the display can be adapted.

► Select *General settings > Display settings* (1).



- Any themes and symbols can be selected here
  (2)
  - ⇒ Further information: GUI customisations 144.455 A en on myThermoplan.
- ► Save changes (3).
- ► **Caution:** If changes have been made, a restart is necessary to apply them.



#### Content management

Under Content management, select (1) whether media content is to be updated locally via a data carrier or remotely via the cloud.



#### Product progress bar

Switch on the product progress bar with slider (1).



► When pouring a product, the product progress is displayed in real time (2).



## 8.6.3 Customer Languages

The product names can be stored in different languages. These can be selected by the user on the product screen. Uploading of specially translated language files is described in a separate tutorial.

© Thermoplan AG 39 / 68

- ► Select General settings > Customer languages (1).
- Activate customer languages via a slider (2).
- ► Under *Standard* (3), the standard language is selected.
- ► Under *restore default settings* (4), the time after which the standard language is shown again can be selected.
- ► Select up to six customer languages (5).
- ► Tap Standard language (6) to display the alternative languages (7).





#### 8.6.4 User settings / standard user settings

The standard user is the user group that is automatically set after restarting the machine or logging out of the user menu. The barista, self-service and the manager can be set as a standard user.

- ► Select *General Settings* > *User Settings* (1).
- ► Set standard user (2).



## 8.6.5 Change/reset PIN

If the option *Individual PIN* is activated (can only be activated by a service technician), the PINs of the user groups can be changed. Each user group can only manage its own PIN. The next higher user group must activate the resetting of the PIN.

#### Change PIN:

- ▶ Select *General Settings > User Settings* (1).
- ► Select Change PIN (2).



- ► Enter the previous PIN (3).
- ▶ Enter the new PIN underneath.
- ▶ Repeat the entry.
- ► Save changes (4).
  - ⇒ The new PIN is now active.

#### Reset PIN:

- ► Select *General Settings > User Settings* (1).
- ► Select Reset PIN (2).
  - ⇒ The own PIN can only be reset by the next higher user group:
    - Manager by Service
    - Barista by Manager





© Thermoplan AG 41 / 68

- ► Confirm reset (3).
  - ⇒ The PIN is reset to the default PIN.



## 8.7 Product settings



Changes in this menu can only be made by the manager user group.

Changing the product parameters influences the taste of the drink!

#### 8.7.1 Product list

The coffee machine is delivered with preset product categories. These serve as the basis for individual coffee recipes. Different product parameters influence the coffee recipes, such as the quantity of water or coffee powder used.


- ► Select*Product settings > Product list* (1).
  - All preprogramed products will be displayed.
- ▶ Press the *Edit* icon (2) to go directly to the *Edit* products menu.



## 8.7.2 Filtering product categories

The list of product categories can be filtered for better clarity.

## Overview of filter symbols

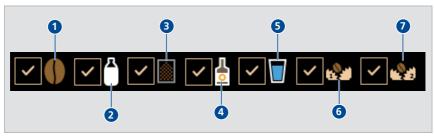

- 1 Products with coffee
- 3 Products with powder (only with BW4c-CTM-P and BW4c-CTM-P-F)
- 5 Products with water
- 7 Products grinder right

- 2 Products with milk (CTM only)
- 4 Products with flavour (only with BW4c-CTM-F and BW4c-CTM-P-F)
- 6 Products grinder left

© Thermoplan AG 43 / 68

#### Using filters

- ► Tap the *Filter* (1) symbol.
- ► Select the desired filter (2).
  - ⇒ The products to which one or more of the filters apply are displayed.
- ► Select the desired product (3).



## 8.7.3 Edit products

- SelectProduct Settings > Edit Products > Adjustments (1).
- ► Use the slider to decrease (2) or increase (3) the different product parameters.
- ► Select different cup sizes (4).
- ► Tap the *Test Product* icon (5) to test the product.
- ► Press the *Change product* icon (6) to change to another product.
- Press the Save icon (7) to save the configuration for the product. Press the Reset icon (8) to cancel the configuration.





## 8.7.4 Creating and Editing Views

#### Creating a new product view

- ► Select product settings > Edit views (1).
- ► Tap the *Add* icon (2) to add a new product screen.



▶ Press the *Edit* symbol (3) to adapt the created product screen in the view editor.



- Adapt the name of the view and dimensions (4) in the views editor.
- ► Press the *Add* symbol (5) to place a product in the desired position.



- ► Select the *product* (6).
  - $\, \Rightarrow \,$  A list with the available products appears.
  - ⇒ The list can be limited using the *Filter symbol* (7) Filtering product categories.
- ► Select Product (8).





© Thermoplan AG 45 / 68

## Create and position group:

► Select *Group* (9) from the list.



► Group (10) is positioned in the view.

Tap the group *Add symbol* to edit the group.



- Adjust the *Product image* (11) and the *Name* (12) of the group.
- ► Press the *Add symbol* (13) to add a product or another group.



- ► Select all products to be displayed in the product group (14).
- ► Confirm (15) to accept the changes.



- ► Tap on the *Add* symbol (16) to add a new page.
- ► Tap on the *Close* symbol (17) to accept the changes and return to the *Product settings*.
  - ⇒ The product symbols can be rearranged randomly by drag&drop.



#### Show view as tree

- ► Tap the tree symbol (18).
  - ⇒ The structure of the view is shown as a tree.



- ► Use Add and Delete symbols (19) to customise the list
- ► Tap the *tile symbol* (20) to return to the normal editor.
- ► Select *Close* (21) to return to the view summary.



#### Activate view

► In the view summary, activate the new product screen (22).



© Thermoplan AG 47 / 68

#### Process existing view

► Tap the edit symbol (23) to open the editor and edit the view again.



## 8.7.5 Steam wand settings

## Configure Black&White AirSteam® product groups

- ► Select*Product settings* (1).
- ► Select Steam wand settings (2).
- ▶ Delete product (3) or add a new product (4).
  - ⇒ Each button can be configured as a product group.
- Toulor Steam Sterrey

  Set Vision

  Art Schem

  Art Schem
- ► Select *Group* (5) to create a product group for the selected button.
- ► Confirm selection (6).



- ▶ Define group name (7).
- ► Select Add key (8) to open the product selection.



Add the desired products (9) one after the other and confirm selection (10).



The added products are displayed under the folder.

► Go to the product screen (12) to obtain the selected products.



## Access Black&White AirSteam® product groups

► Select product group (1).



- ► Select a product from the group (2).
- ► Confirm selection (3).



© Thermoplan AG 49 / 68

The key is now programmed with the desired product (4).



#### 8.8 Statistics

#### 8.8.1 Product ranking list

- Select Statistics > Product ranking list > Total (1).
  - All the products since the machine (3) has been installed are displayed.
  - ⇒ The product ranking list can be sorted by product name or quantity (2).
- SelectStatistics > Product ranking list > Manager (4).
  - ⇒ All products since the last reset will be displayed.
  - ⇒ The product ranking list can be sorted by product name or quantity.
  - ⇒ The statistics can be deleted by the user group manager (5) at any time.

#### 8.8.2 Machine counters

- ► Select *Statistics* > *Machine Counters* (1).
  - ⇒ The following counters are displayed:
    - Milk (duration, aborted)
    - Product counter (service, warranty)
    - Water (water filter, water total)
  - ⇒ These counters can only be deleted by a service technician.







## 8.9 System

## 8.9.1 System information

System information can be viewed by the barista and manager user groups.

- ► Select *System > Information* (1).
  - ⇒ The following information is displayed:
    - Machine (serial number)
    - Version info
    - Software
    - Network



#### 8.9.2 Licenses

All legally relevant licensing information is listed under *System > Licences* 

© Thermoplan AG 51 / 68

## 8.10 Events

## 8.10.1 Event Log

- ► Select*Event > Event Log* (1).
  - ⇒ All previous events will be displayed (2).
  - ⇒ The event log can only be deleted by a service technician.




## Filtering Events

► Select *Filtering* (1).



- Select Display all months (3) to display the events of the whole year.
- Select one or several months (4) to limit the results.
- ▶ Use filter (5).
  - ⇒ The results (6) are displayed.

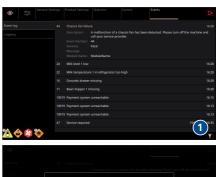





## 8.10.2 Recordings



Changes in this menu can only be made by the manager user group.

The recordings menu allows you to record machine activities during a specific time period. The recordings can then be evaluated by a service technician.

- ► Select*Events* > *Recordings* (1).
- ► Enter the desired period (2), in which the machine activities should be logged.
- ► Start recording (3).







© Thermoplan AG 53 / 68

# 9 Cleaning

# 9.1 Cleaning agents and accessories

## **!** CAUTION

Danger of poisoning through cleaning agents



Minor to moderate risk of poisoning through ingestion of cleaning agents.

- Do not consume cleaning agents.
- After using cleaning agents, wash your hands.
- Keep unauthorised people away from cleaning agents.

## NOTICE

Coffee machine damage through use of the wrong cleaning agents

The coffee machine is damaged through the use of the wrong cleaning agents and accessories.



- Only use the cleaning agents prescribed by Thermoplan.
- Cloths for cleaning should only be slightly moistened. Dripping cloths or sponges can cause
  a short circuit.
- Cloths used to clean the machine components which come into contact with food must be germ-free.
- Alcohol, ethanol, methylated spirits, disinfectants or acidic cleaning agents, such as acetic
  acid must not be used for cleaning.

The following is required for cleaning:

- Warm soap solution
- · Cloth for damp cleaning
- · Cloth for dry cleaning
- Cleaning tablets for the coffee system

# 9.2 Cleaning schedule


The cleaning schedule describes which cleaning steps are to be carried out at which interval. This cleaning schedule must be strictly complied with to ensure hygiene and product quality.

24 h	48 h	Weekly	Cleaning step	Comment
	1x		Execute automatic cleaning	Execute automatic cleaning
1x			Cleaning exterior components	Clean exterior components
1x			Cleaning the grounds container and drip tray	Clean the grounds container and drip tray
		1x	Cleaning bean hopper	Clean bean container
1x			Cleaning product outlet	Cleaning product outlet
1x			Cleaning the steam wand	[Cleaning the steam wand ▶ 56]


# 9.3 Cleaning product outlet

## 9.3.1 Standard outlet/Automatic outlet


► Slide product outlet upwards.

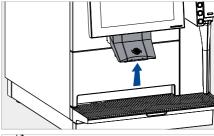

Press the retaining clips together and loosen the product outlet.

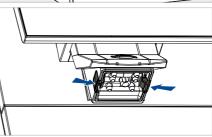


▶ Pull the product outlet block out of the product outlet.

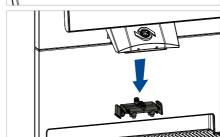

© Thermoplan AG 55 / 68

- ► Thoroughly flush out the product outlet block thoroughly with a soap water solution. Then rinse out with clean water.
- ► Clean product outlet with a small brush.
- ▶ Dry and re-insert product outlet block.

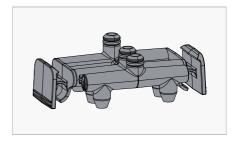

# 9.4 Cleaning the steam wand


# **A CAUTION**

# Danger of scalding




Danger of light or moderate scalding through contact with hot liquids and steam.


- Keep your hands away from the product outlets.
- Avoid direct body contact with hot liquids and steam.
- ▶ Do not touch the product outlets during cleaning.
- Press in both ball pushers and remove the steam pipe.

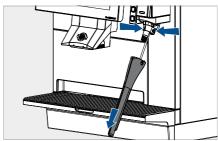


- ► Wipe the temperature sensor (1) with a cloth moistened in soapy water.
- ► Rinse the steam pipe (2) with a warm soapy water solution.

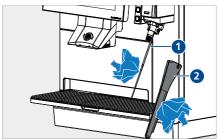

► Carefully slide the steam pipe over the temperature sensor until it clicks into place.

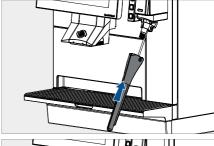

► Clean the outside of the steam tube with a cloth moistened in soapy water.

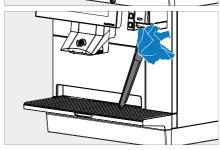


## Cleaning the steam pipe after each use


The steam pipe must be blown out thoroughly with steam and wiped off each time after use.

## 9.5 Clean bean container

► Remove the lid of the bean hopper.

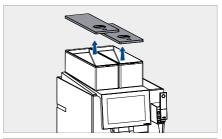


Turn the lever in the bean hopper anticlockwise to detach the bean hopper.

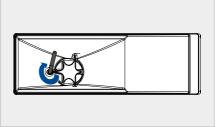


© Thermoplan AG 57 / 68


- Lift bean hopper with both hands and remove it.
- ▶ Remove beans from the bean hopper.
- ► Store beans in a cool, dry and dark place.

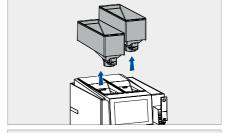

Remove the remaining beans from the grinders with a hand vacuum cleaner.

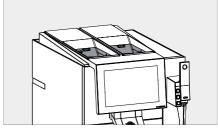

- ➤ Thoroughly flush out the bean hopper (1) and lid (2) with a warm soap water solution. Then rinse out with clean water.
- Thoroughly dry the bean hopper and lid and reinsert.

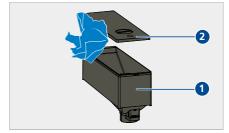

# 9.6 Cleaning prompt



The cleaning prompt appears after a defined period.

Execute automatic cleaning as soon as possible. The products remain available. The message appears 48 hours after the first coffee product is purchased.



Execute automatic cleaning immediately. The products are no longer available. The message appears 50 hours after the first coffee product is purchased.

## 9.7 Execute automatic cleaning

If an external waste water tank is used, it must be emptied beforehand.

Automatic cleaning can be executed in three ways.

#### Variant 1: Via the user menu (any time)



- Call up the user menu.
- ► Tap on the *Cleaning* (1) symbol.
  - ⇒ Cleaning starts.
- ► Follow the instructions on the display.
  - ⇒ The automatic cleaning process takes about 8 minutes



#### Variant 2: Note on the machine display

A cleaning prompt appears on the product screen as soon as the predefined time after the first dispensing of the product has elapsed.

- ► Tap on the *Cleaning* (1) symbol.
  - ⇒ Cleaning starts.
- ► Follow the instructions on the display.
  - ⇒ The automatic cleaning process takes about 6 minutes



#### Variant 3: Via the login window (any time)



- ► Tap and hold the *User menu* symbol.
  - $\Rightarrow$  The login window appears.
- ► Tap on the *Cleaning* (1) symbol.
  - ⇒ Cleaning starts.
- ► Follow the instructions on the machine display.
  - ⇒ The automatic cleaning process takes about 6 minutes.



## 9.8 Cleaning key

#### Coffee cleaning key (red)

The coffee cleaning key (red) is used for cleaning the coffee system. It is located inside the machine behind the grounds container.





© Thermoplan AG 59 / 68

▶ Remove the grounds container.


**Note:** For use in self-service, the drip tray can be removed only after the grounds drawer has been removed. It is additionally monitored with the cup sensor (if present).

► Turn the cleaning key 90° anticlockwise and then pull it out.

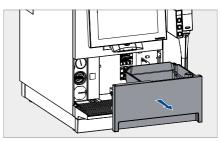


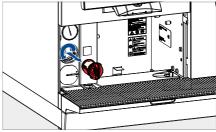

► Insert 1 coffee cleaning tablet into the cleaning key according to the display.

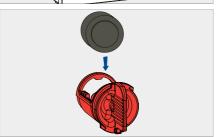

- ► Insert the cleaning key and turn 90° clockwise.
- ► Re-insert the grounds container.
- ► Start cleaning via the display.

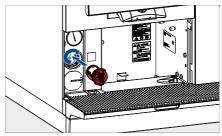

# 9.9 Clean the grounds container and drip tray

# NOTICE




Damage of the grounds drawer


The grounds drawer can be damaged if not cleaned properly.

► Carefully tap the coffee grounds out of the grounds drawer.

Remove the grounds container and wash out with a soap water solution. Then dry.

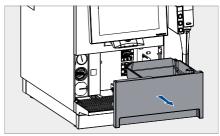

- Remove the drip tray, empty it and wash it out using a soapy water solution. Then dry.
- ► Insert the drip tray.
- ► Insert the grounds drawer.

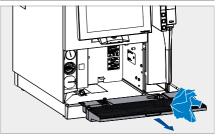


## 9.10 Clean exterior components

- ► Moisten a non-abrasive cloth with a soap/water solution.
- ► Carefully clean the outside of the coffee machine.



► Carefully clean the display with any type of glass cleaner (e.g. disinfectant).

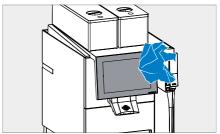

© Thermoplan AG 61 / 68

# 10 Troubleshooting

## 10.1 Overview

Instructions and error messages appear on the product screen (4). Details concerning the messages can either be shown by tapping the appropriate symbol or in the "events" menu. If the error is rectified, the error message disappears.



- 1 Close message
- 3 List of Events

- 2 Message details
- 4 Event Symbol/Event No. /Time of the Occurrence/ Brief Description

## 10.2 Possible indications and errors and their rectification

The following notices and error messages can appear on the display. In the case of two bean hoppers, the hopper concerned is indicated in the message with the corresponding number.

Symbol	Meaning/reason	Rectification
	Information e.g. "Machine starts"	► Follow the display instructions.
	Warnings e.g. "Extraction time too long"	► Follow the display instructions.
•	Error e.g. "Brewing piston error"	► Follow the display instructions.
×	Serious error e.g. "General error"	► Follow the display instructions.

Symbol	Meaning/reason	Rectification
	Cleaning recommended	▶ Perform cleaning as soon as possible.
	Cleaning required	Perform cleaning immediately. Products are blocked.
	Grounds container almost full	Empty grounds container as soon as possible.
	Grounds container full	Empty grounds container. Products are blocked.
	Grounds container is missing	► Insert the grounds drawer. Products are blocked.
	Bean hopper X empty	► Fill with fresh coffee beans in the indicated bean hopper.  Products from the corresponding bean hopper are blocked.
	Bean hopper X is missing	Insert the displayed bean hopper. Products from the corresponding bean hopper are blocked.
*	Chassis fan error	► Follow the display instructions.
	Open cover/door	Check whether all covers on the coffee machine are closed correctly (CTM-P / CTM-F / CTM-P-F only).
	Water filter change recommended	► Change water filter as soon as possible.
	Water filter change required	► Change water filter.
	Service is recommended	▶ Perform service as soon as possible.
	Service required	▶ Perform service.

© Thermoplan AG 63 / 68

# 11 Accessories and consumables

# 11.1 Cleaning agents

Thermoplan Coffee Cleaning Tablets

Art. no.	Description
128,540	Tub with Thermo Coffee Tabs (31 tabs, Schulz)
128,541	Box with Thermo Coffee Tabs (12 tubs, Schulz)

Cleaning accessories

Art. no.	Description
144,775	Cleaning brush

## 11.2 Accessories

Thermoplan pitchers

Art. no.	Designation
145,557	Pitcher 35 cl / 11.8 oz
145,558	Pitcher 50 cl / 16.9 oz
145,559	Pitcher 75 cl / 25.4 oz

# 12 EU Declaration of Conformity

Trade mark Black&White4 Product model DIMA CT BW4-CTM BW4-CTM-F BW4-CTM-FUT BW4-CTMplus RW4-CTS RW4-CTM-RS BW4-CTM-F-RS BW4-CTM-FUT-RS BW4-CTMplus-RS RW4-CTMnlus-RI BW4-CTM-RI BW4-CTM-F-RL RWA-CTM-FUT-RI RW4-CTM-P-F BW4-CTM-P-FUT BW4-CTMplus-P RW4-CTM-P BW4-CTM-P-RS BW4-CTM-P-F-RS BW4-CTM-P-FUT-RS BW4-CTMplus-P-RS BW4-CTM-P-F-RL BW4-CTM-P-RL BW4-CTM-P-FUT-RL BW4-CTMplus-P-RL

Name und Anschrift des Herstellers: Name and address of the manufacturer: Nom et adresse du fabricant:

Thermoplan AG, Thermoplan-Platz 1, 6353 Weggis, Switzerland

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller. This declaration of conformity is issued under the sole responsibility of the manufacturer.

La présente déclaration de conformité est établie sous la seule responsabilité du fabricant.

Gegenstand der Erklärung: Object of the declaration: Objet de la déclaration:

Automatic coffee machine

Der oben beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union: The object of the declaration described above is in conformity with the relevant Union harmonisation legislation: L'objet de la déclaration décrit ci-dessus est conforme à la législation d'harmonisation de l'Union applicable:

2014/35/EU	(LVD)	1935/2004/EU	(FCM)
2014/30/EU	(EMC)	2023/2006/EU	(GMP)
2015/863/EU	(RoHS)	2006/42/EU	(MD)

Angabe der einschlägigen harmonisierten Normen, die zugrunde gelegt wurden, oder Angaben der anderen technischen Spezifikationen, in Bezug auf die die Konformität erklärt wird:

References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared: Références des normes harmonisées pertinentes appliquées ou des autres spécifications techniques par rapport auxquelles la conformité est déclarée:

EN 60335-1:02/A1:04+A11:04+A12:06+A13:08+A14:10+A15:11 EN 300 328 V.2..2 EN 60335-1:12-A11:14+A13:17+A1:19+A14:19+A2:19+A15:21 EN 301 489-17 V.2..3 EN 60335-2-75:04 + A1:05 + A2:08 + A1:06 + A12:10 EN 301 489-17 V.3..4 EN 61000-3-3:13 + A1:19 + 11:19 + 12:11 EN 51000-4-13:02 + A1:09 + A2:16 EN 16000-6-2:05 + 3:07 + A1:11 EN 16000-6-2:05 + 3:07 + A1:20 EN 16000-6-2:05 + 3:07 + A1:20 EN 16000-6-2:05 +

Unterzeichnet für und im Namen von: Signed for and on behalf of: Signé par et au nom de:

CH-6353 Weggis, 19.04.2024 (Ort und Datum der Ausstellung) (Place and Date of issue) (Lieu et date)

Verantwortlich für die technische Dokumentation ist: Responsible for the technical documentation is: Responsable de la documentation technique: Adrian Steiner, CEO

(Name, Funktion und Unterschrift des Befugten) (Name, function and signature of authorized person) (Nom, fonction et signature du signataire autorisé)

Guido Di Seri



© Thermoplan AG 65 / 68

# 13 UK Declaration of Conformity

Trade mark Black&White4 Product model BW4-CT BW4-CTMplus BW4-CTS BW4-CTM-RS BW4-CTM-F-RS BW4-CTM-FUT-RS BW4-CTMplus-RS BW4-CTM-RL BW4-CTM-F-RL BW4-CTM-FUT-RL BW4-CTMplus-RL BW4-CTM-P BW4-CTM-P-F BW4-CTM-P-FUT BW4-CTMplus-P BW4-CTM-P-RS BW4-CTM-P-F-RS BW4-CTM-P-FUT-RS BW4-CTMplus-P-RS

BW4-CTM-P-F-RL

BW4-CTM-P-FUT-RL

BW4-CTMplus-P-RI

Name und Anschrift des Herstellers: Name and address of the manufacturer: Nom et adresse du fabricant:

Thermoplan AG, Thermoplan-Platz 1, 6353 Weggis, Switzerland

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller. This declaration of conformity is issued under the sole responsibility of the manufacturer.

BW4-CTM-P-RL

La présente déclaration de conformité is issued under the sole responsibility of the manufacturer.

Gegenstand der Erklärung: Object of the declaration: Objet de la déclaration:

Automatic coffee machine

Der oben beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union: The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

L'objet de la déclaration décrit ci-dessus est conforme à la législation d'harmonisation de l'Union applicable:

UK SI 2016 No. 1101 (LVD) UK SI 2012 No. 2619 (FCM)

UK SI 2016 No. 1091 (EMC) UK SI 2005 No. 1803 (General Product Safety)
UK SI 2012 No. 3032 (RoHS)

Angabe der einschlägigen harmonisierten Normen, die zugrunde gelegt wurden, oder Angaben der anderen technischen Spezifikationen, in Bezug auf die die Konformität erklärt wird:

References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared: Références des normes harmonisées perlinentes appliquées ou des autres spécifications techniques par rapport auxquelles la conformité est déclarée:

EN 60335-1:02/A1:04+A11:04+A12:06+A13:08+A14:10+A15:11 EN 60335-1:12+A11:14+A13:17+A1:19+A14:19+A2:19+A15:21 EN 60335-2-75:04 + A1:05 + A2:08 + A11:06 + A12:10

EN 61000-3-3:13 + A1:19 + 11:19 + 12:11 EN 61000-4-13:02 + A1:09 + A2:16 EN 61000-6-2:05 +3:07 + A1:11

EN 62233:08

(Lieu et date)

Unterzeichnet für und im Namen von: Signed for and on behalf of: Signé par et au nom de:

CH-6353 Weggis, 19.04.2024 (Ort und Datum der Ausstellung) (Place and Date of issue)

Verantwortlich für die technische Dokumentation ist: Responsible for the technical documentation is: Responsable de la documentation technique: EN 300 328 V2.2.2 EN 301 489-1 V2.2.3

EN 301 489-17 V3.2..4 EN 50581:12 EN IEC 55014-1:2021 EN IEC 55014-2:2021

EN IEC 61000-3-2:19 + A1:20

Adrian Steiner, CEO

(Name, Funktion und Unterschrift des Befugten) (Name, function and signature of authorized person) (Nom, fonction et signature du signataire autorisé)

Guido Di Seri



# 14 FCC/IC Declarations of Conformity

#### FCC Declaration of Conformity

This equipment has been tested and complies with the limit values for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limit values are designed to provide reasonable protection against harmful interference in case of installation in residential areas. This device generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- Increase the distance between the device and receiver.
- Connect the device into a power socket on a circuit different from that to which the receiver is connected.
- ► Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment (part. 15.21).

### IC Declaration of Conformity

This device complies with RSS-210 of the IC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment was tested and complies with the limit values for a Class B digital device, pursuant to RSS-210 of the IC Rules. These limit values are designed to provide reasonable protection against harmful interference in a residential area. This device generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment (RSS-210).

#### Explanation of radiation exposure

To comply with FCC and Industry Canada RF limits for the general population / uncontrolled exposure, the antenna(s) used for this transmitter must be installed to maintain a separation distance of at least 29 mm from all persons and operated in conjunction with another antenna or transmitter, except in accordance with FCC multiple transmitter product procedures.

© Thermoplan AG 67 / 68



Your service partner

Thermoplan AG Thermoplan-Platz 1 6353 Weggis, Switzerland

Tel. +41 41 392 12 00

thermoplan@thermoplan.ch www.thermoplan.ch